
## ER Quick Guide

Read and Understand Operation Manual before Operating Stage Stage Setup

- Position and chock stage, disconnect tow vehicle 1
- 2 Verify area is clear of obstacles, wires, and people 3 Release flybay door latches and open (2) ends, 3
- engage top lock pins 4
- Turn power switch timer **ON** (located in key box) 4
- 5 Level trailer frame lengthwise using tongue jack (1)
- Extend (4) corner jacks (2) and level trailer 6
- Lower monitor-mix decks (5) (if equipped)- (2) ends 7 Using controller, open canopy approximately 24" 8 (60cm)
- Install lower flybay support bars 7 (2) ends 9
- 10 Lower and secure mid-frame support jacks 6
- 11 Open stage until lowest deck corner is level with center deck. Lower corner jack to (8) ground.
- 12 Repeat procedure with other (3) corners.
- 13 Fully raise canopy to allow removal of (4) deck linkage pins. (9) Install pins in deck braces (4) places.
- 14 Adjust deck truss leveling/support jacks until pins are tight (8) (4) corners.
- 15 Lower and set mid deck-truss support jacks. (1)
- 16 Pin and secure roof canopy braces (4) places (1)
- Turn power switch OFF 17
- 18 Double check all connections

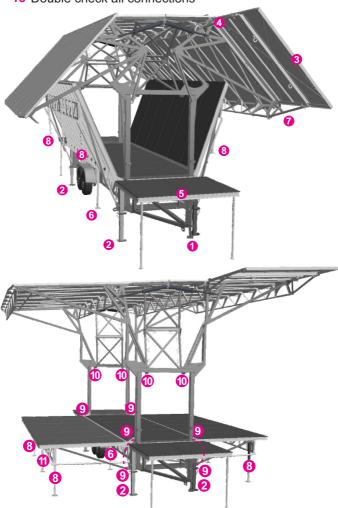

## Stage Closing

- Remove all attached accessories stairs, rails, 1 windwalls, etc.
- 2 Turn power switch timer ON
- 3 Remove and store canopy lock pins (1) (4) places
- Remove deck brace pins, install in vertical linkages 4 (4) places 9
- Retract deck truss leveling/support jacks (8) (1) 5
- Using controller, lower canopy to 24" from closed 6 7 Retract mid-frame jacks 6
- 8 Remove and store flybay lower support bars and pins 7 (2) ends
- 9 Fully close canopy
- 10 Secure center deck cargo with tie-down straps
- 11 Raise and secure monitor/mix platforms (3) (2) ends
- 12 Release flybay upper lock pins 4
- 13 Close and latch flybay doors (3) (2) ends
- 14 If folded, pivot and pin (2) hitch tongue sections
- 15 Extend tongue jack 1
- 16 Retract corner leveling/support jacks 2 (4) places
- 17 Connect tow vehicle hitch, electrical, safety chains

## Canopy Mounted Equipment Installation

- Remove roof pins (1) and lower canopy using controller. 1 Note - Canopy truss bottom bar minimum 6ft (1.8m) from stage deck
- Install equipment (windwalls, banners, speakers, lights) 2 observing loading limitations in manual
- 3 Fully open stage canopy
- Install canopy lock bar pins 🕕 (4) places 4
- Turn timer power switch to OFF 5
- Note Additional canopy mounted equipment may be 6 winched into position. Follow loading limitations found in operation guide.

CAUTIONS
Discontinue Set Up - lower canopy 40 mph (64 kph) Remove Windwalls/Backdrops 30 mph (48 kph) Pull quick-release handle(s) Lower speakers to ground level
Remove Banners 30 mph (48 kph) Remove canopy lock-bar pins - (4) places Lower roof canopy Remove banners
Maximum Stage Wind Capacity 80 mph (128 kph)* * Roof Canopy raised and locked * No windwall/backdrops or banners attached
Evacuate personnel a minimum 40 mph (64 kph) of 100ft (30m) from stage
Read and understand stage operation guide prior to operating stage Certified Training Required to Operate Stage
Century Industries (812) 246-3371

centuryindustries.com