


TSP 15

MOBILE GRANDSTAND

Quick Guide

Setup

- Extend tongue jack **1** and disconnect tow vehicle.
- Stow safety chains, 12V connector, emergency breakaway cable. Caution - Do not remove breakaway pin from switchbox.
- Level grandstand lengthwise using tongue jack (adjust to ground slope)
- Rotate leveling/support jacks **2** to vertical, re-pin, extend jack legs to ground.
- Unpin outrigger jacks **3** (2) places, swing out, insert pins, extend jack legs to ground.
- Open lid on mechanical compartment. **4** Rotate timer switch to "ON" position. Remove control from compartment.
- Visually check that area is clear.
- Push "CLOSE" button to fully close bleacher, then push "OPEN" button until grandstand is fully extended.
- Secure lock chains **5** along rear of grandstand.
- Set lower guardrails at each end, **6** remove pin, swing lower guardrail into place, pin in place and install keeper.
- Unpin and remove aisle handrails **7** from stored position and insert into aisleway.
- Check leveling/support jacks **2** and reset as required.
- Rotate timer switch to "OFF" position.
- Stow control pendant and close compartment lid and secure. **4**

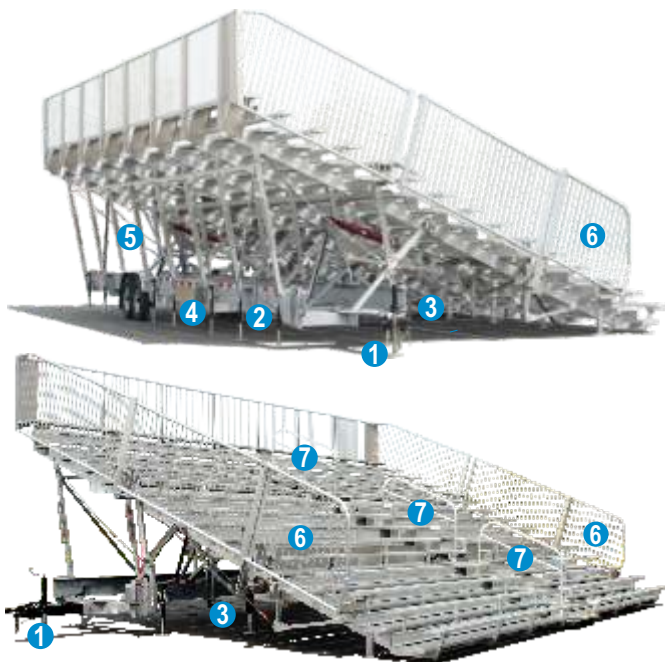

Close

- Remove aisle handrails, **7** return to storage position, secure with pin.
- Fold lower guardrails at each end, **6** remove pin, swing lower guardrail rearward, pin in place and install keeper.
- Release and store all rear lock chains. **5**
- Open lid on mechanical compartment. **4** Rotate timer switch to "ON" position. Remove wired control from compartment.
- Visually check that area is clear.
- Press and hold "CLOSE" button until grandstand is fully closed.
- Rotate timer switch to "OFF" position. Store control pendant. **4** Close compartment lid.
- Extend tongue jack leg to ground contact.
- Retract outrigger jack legs, unpin, swing to travel position, repin **3** (2) places.
- Retract, rotate to horizontal, and repin all frame support jacks. **2**
- Connect tow vehicle - coupler, safety chains, 12V connector, emergency breakaway cable.
- Check coupler, signal lights and brake operation prior to towing.

Read and understand operation guide prior to towing and operation.