
Guick Guide

Stage Setup

- 1 Position stage and disconnect tow vehicle.
- 2 Verify area is clear of obstacles, wires, and people.
- 3 Release flybay door latches and open doors. 3
- until top latch pins 4 engage (verify pins are visible).
- 4 Level trailer frame lengthwise using tongue jack.
 5 Turn control box power switch timer ON
- 6 Extend (4) corner jacks ② and level trailer.
- 7 If equipped, lower monitor-mix decks. 5
- 8 Using controller open canopy approximately 24" (60 cm).
- Install lower flybay support bars 7 and pin.
- 10 Lower & secure trailer mid-frame leveling/support jacks.
 11 Open stage until lowest deck corner is slightly below center
- deck level. Extend corner jack foot (3) to ground contact. Repeat for other (3) deck corners.
- 12 Remove canopy/deck linkage pins (9) and install pins in diagonal deck braces (10) (4) places.
- 13 Adjust deck truss leveling/support jacks (3) until pins (1) are snug.
- 14 Lower & secure deck mid-truss support jacks.
- **15** Fully raise canopy and pin bars **(1)** (4) places.
- 16 Double-check all connections. Make sure all jacks are securely planted.
- 17 Turn power switch OFF.

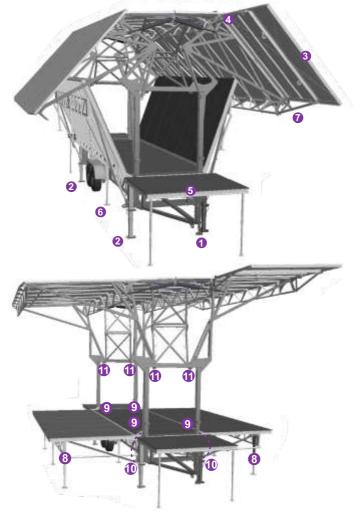

Stage Closing

- 1 Remove all attached accessories stairs, rails, windwalls, etc.
- 2 Open control box Turn power switch timer ON.
- 3 Remove and store canopy lock pins 1 (4) places.
- 4 Remove deck brace pins¹, install in vertical ⁹ links Four (4) places.
- 5 Retract deck truss leveling/support jacks.
- 6 Using controller, lower canopy to 12" from closed.
- 7 Retract mid-frame jacks. 6
- 8 Remove and store flybay lower support bars 7 and pins (2) ends.
- 9 Fully close canopy
- 10 Attach cargo tie-down straps.
- 11 Raise & secure monitor-mix platforms 6 if equipped
- 12 Close and latch flybay doors (2) ends. 3
- 13 If folded pivot and pin (2) hitch sections.
- 14 Extend tongue jack.
- **15** Retract corner leveling/support jacks **2** (4) places.
- 16 Connect to tow vehicle hitch, safety chains, electrical.

Canopy Mounted Equipment Installation

- Remove roof lock bar pins ① and lower canopy. Note - Minimum of 6ft (1.8m) distance between bottom bar of truss and stage deck when lifting equipment.
- 2 Install equipment (windwalls, banners, speakers, lights) following canopy loading limitations.
- 3 Fully open stage canopy.
- 4 Install canopy lock bar pins (1) (4) places.
- 5 Turn power timer switch to OFF.
- 6 Note Additional canopy mounted equipment may be winched into position - follow canopy loading limitations.

CAUTIONS
Discontinue Set Up - lower canopy 40 mph (64 kph) Remove Windwalls/Backdrops 30 mph (48 kph) Pull quick-release handle(s) Lower speakers to ground level
Remove Banners 30 mph (48 kph) Remove canopy lock-bar pins - (4) places Lower roof canopy Remove banners
Maximum Stage Wind Capacity 80 mph (128 kph) * Roof Canopy raised and locked * No windwall/backdrops or banners attached
Evacuate personnel a minimum 40 mph (64 kph) of 100ft (30m) from stage
Read and understand operation manual prior to operating stage Certified Training Required to Operate Stage
Century Industries (812) 246-337 century century