

# FrontRow 4500


## MOBILE CONCERT STAGE

### Quick Guide

Read and Understand Operation Manual  
before Operating Stage

#### Stage Setup

- 1 Position and chock stage, disconnect tow vehicle
- 2 Verify area is clear of obstacles, wires, and people
- 3 Release flybay door latches and open (2) ends, ③ engage top lock pins ④ (Verify pins are visible)
- 4 Rotate power switch timer **ON** (located in key box)
- 5 Level trailer frame lengthwise using tongue jack ①
- 6 Extend (4) corner jacks ② and level trailer
- 7 Lower monitor-mix decks ⑤ (if equipped)- (2) ends
- 8 Using controller, open canopy approximately 24" (60cm)
- 9 Install lower flybay support bars ⑦ - (2) ends
- 10 Lower and secure mid-frame support jacks ⑥
- 11 Open stage until lowest deck corner is level with center deck. Lower corner jack to ⑧ ground.
- 12 Repeat procedure with other (3) corners.
- 13 Fully raise canopy to allow removal of (4) deck linkage pins. ⑨ Install pins in deck braces (4) places.
- 14 Adjust deck truss leveling/support jacks until pins are tight ⑧ (4) corners.
- 15 Lower and set mid deck-truss support jacks. ⑪
- 16 Pin and secure roof canopy braces (4) places ⑩
- 17 Rotate power switch **OFF**
- 18 Double check all connections

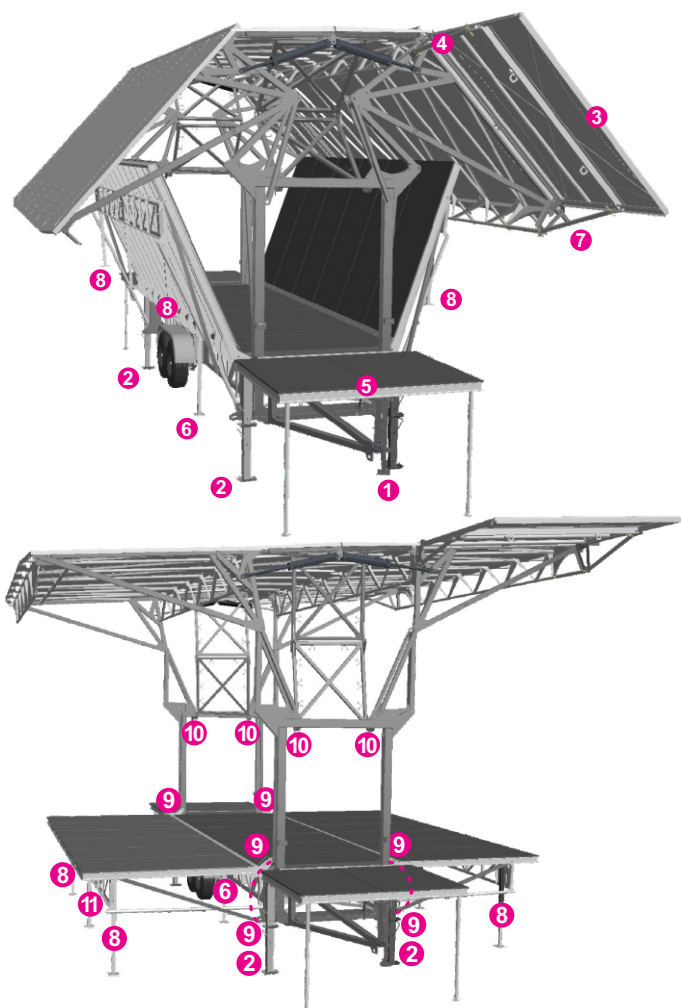

#### Stage Closing

- 1 Remove all attached accessories - stairs, rails, windwalls, etc.
- 2 Rotate power switch timer **ON**
- 3 Remove and store canopy lock pins ⑩ (4) places
- 4 Loosen truss jacks - mid-truss jacks first ⑧ ⑪
- 5 Remove deck brace pins, install in vertical linkages (4) places ⑨
- 6 Retract deck truss leveling/support jacks ⑧ ⑪
- 7 Using controller, lower canopy to 24" from closed
- 8 Retract mid-frame jacks ⑥
- 9 Remove and store flybay lower support bars and pins (2) ends ⑦
- 10 Fully close canopy
- 11 Secure center deck cargo with tie-down straps
- 12 Raise and secure monitor/mix platforms ⑤ (2) ends
- 13 Release flybay upper lock pins ④
- 14 Close and latch flybay doors ③ (2) ends
- 15 Rotate power timer **OFF**, secure compartment
- 16 If folded, pivot and pin (2) hitch tongue sections
- 17 Extend tongue jack ①
- 18 Retract corner leveling/support jacks ② (4) places
- 19 Connect tow vehicle - hitch, safety chains, 12VDC electrical, breakaway cable

#### Canopy Mounted Equipment Installation

- 1 Remove roof pins ⑩ and lower canopy using controller.  
**Note** - Canopy truss bottom bar minimum 6ft (1.8m) from stage deck
- 2 Install equipment (windwalls, banners, speakers, lights) observing manual loading limitations.
- 3 Fully open stage canopy
- 4 Install canopy lock bar pins ⑩ (4) places
- 5 Turn timer power switch to **OFF**
- 6 Note - Additional canopy mounted equipment may be winched into position. **Follow loading limitations found in operation guide.**

#### CAUTIONS

- Discontinue Set Up - lower canopy 40 mph (64 kph)  
Remove Windwalls/Backdrops 30 mph (48 kph)  
Pull quick-release handle(s)  
Lower speakers to ground level
- Remove Banners 30 mph (48 kph)  
Remove canopy lock-bar pins - (4) places  
Lower roof canopy  
Remove banners
- Maximum Stage Wind Capacity 80 mph (128 kph)\*  
\* Roof Canopy raised and locked  
\* No windwall/backdrops or banners attached
- Evacuate personnel a minimum 40 mph (64 kph)  
of 100ft (30m) from stage

Read and understand stage operation guide prior to operating stage.

**Training Required to Operate Stage**