

TSP8VIP

MOBILE GRANDSTAND

Quick Guide

Grandstand Open

- Chock wheels. Extend tongue jack ① and disconnect tow vehicle.
- Stow safety chains, 12V connector, emergency breakaway cable. **Note** - Do not remove breakaway pin from switchbox.
- Level bleacher lengthwise using tongue jack (adjust to ground slope)
- Rotate all leveling/support jacks ② to vertical, re-pin, extend jack legs to ground contact.
- Level bleacher width-wise as required.
- **Retract tongue jack leg. ①**
- **Remove red hitch pin. ③**
- Open mechanical compartment lid. ④ Rotate timer switch to “ON” position. Remove control from compartment.
- Visually check that area is clear.
- Press and hold **OPEN** to fully open bleacher.
- Extend bottom step. ⑤
- Unpin and remove aisle handrails ⑥ from stored positions and insert into aisleway.
- Check leveling/support jacks ② and reset as required.
- Rotate timer switch to “OFF” position.
- Stow control pendant, close compartment lid and secure. ④
- Retract hitch if desired. ⑦



Grandstand Close

- Extend hitch if retracted. ⑦
- Retract bottom step. ⑤
- **Remove aisle handrails, ⑥** return to storage positions, secure with pins.
- Open mechanical compartment lid. ④ Rotate timer switch to “ON” position. Remove control from compartment.
- Visually check that area is clear.
- Press and hold “**CLOSE**” button until bleacher is fully closed.
- Rotate timer switch to “OFF” position. Store control pendant. ④ Close compartment lid.
- **Insert red hitch pin. ③**
- Extend tongue jack leg to ground contact. ①
- Retract, rotate to horizontal, and repin all frame support/leveling jacks. ②
- Connect tow vehicle - coupler, safety chains, 12V connector, emergency breakaway cable.
- Check coupler, signal lights and brake operation prior to towing.

Read and understand operation guide prior to bleacher towing and operation.